

CB120W CB240W CB280W CB480W: Smart Battery Chargers

Thank you for having chosen one of our products for your work. We are certain that it will give the utmost satisfaction and be a notable help on the job.


General Description

CB series is Charge & Testing devices in "Switching technology" and "Battery Care philosophy", since many years parts of the know-how ADEL system. This technology led to the development of this advanced multi-stage battery charging, completely automatic and suited to meet the most advanced requirements of battery manufacturers. The Battery Care concept is based on algorithms that implement rapid and automatic cycle of battery charging, battery charge optimization during time, flat batteries recovery and real time diagnostic during installation and operation. The Real Time Auto-diagnostic system, monitoring battery faults such as, elements in short circuit, accidental reverse polarity connection, disconnection of the battery, they can easily be detected and removed by help of Blink Code of Diagnosis Led; during the installation and after sell. Each device is suited for all battery types, jumper selection sets a predefined curves for: Open Lead Acid, Sealed Lead Acid, Gel, Ni-Cd and Ni-Mh. A rugged casing with bracket for DIN rail mounting provide IP20 protection degree.



Main Characteristics

- Input: Single-phase 115 – 230– 277 Vac
- Output Battery: charging: 24 Vdc 10A – 20 A
12 Vdc 10A – 35 A
- Suited for the following battery types: Open Lead Acid, Sealed Lead Acid, Lead Gel, Ni-Cd and Ni-Mh
- Automatic diagnosis of battery status and battery Life Test function (Battery Care)
- Switching technology- High efficiency
- Three charging levels: Boost, Float and Recovery
- Protected against short circuit, Over Load and inverted polarity
- Output dry contact for discharged or damaged battery
- Output dry contact for Mains or Back-Up
- Protection degree IP20 – DIN rail; Space saving
- Temperature Compensated Charging
- ADELBus connection: ModBus (RTU)

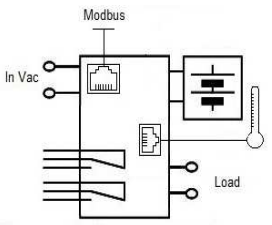

Safety and warning notes


WARNING – Explosion Hazard Do not disconnect Equipment unless power has been switched off or the area is known to be non-hazardous.
WARNING – Explosion Hazard. Substitution of components may impair suitability for class I, Division 2.
WARNING – Switch off the system before connecting the module. Never work on the machine when it is live. The device must be installed in according with UL508 or UL 60950. The device must have a suitable isolating facility outside the power supply unit, via which can be switched to idle. Danger of fatal Injury!

Connection (terminal and wiring):

Cable Connection: The following cable cross-sections may be used:

	Solid (mm ²)	Stranded (mm ²)	AWG	Torque (Nm)	Stripping Length	All in One (Size)	1 Phase L N PE Input AC	1 Phase L N PE Input AC
In	0.2 – 2.5	0.2 – 2.5	24 – 14	0.5 – 0.6	7 mm	Size 1 and 2		
	4.0	6.0	30 – 10	0.8 – 1.0	7 mm	Size 3		
Out	0.2 – 2.5	0.2 – 2.5	24 – 14	0.5 – 0.6	7 mm	Size 1 and 2		
	4.0	6.0	30 – 10	0.8 – 1.0	7 mm	Size 3		
Signal	0.2 – 2.5	0.2 – 2.5	24 – 14	0.5 – 0.6	7 mm	All types		

The connection is made by the screw type 2.5 mm² or 4.0 mm² (CB2420A – CB1235A) terminal blocks. Use only copper cables that are designed for operating temperatures of > 75 °C. Wiring terminal shall be marked to indicate the proper connection for the power supply. Output Power connections:

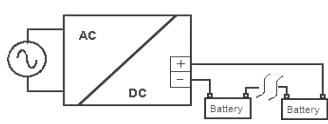

Normal connection: Battery & Testing Charger:


Typical application for CBxyy device:
 N°1 battery (12 Vdc) for CB12yy;
 N°2 battery (12 Vdc) connected in Series for CB24yy;

"Redundancy" Connection


It's possible to request the Redundancy option for the model CB2420AP. Just connect the two CB via the RJ45 cable to AUX2 and power on them (also at different times), automatically one of the CB becomes the real battery charger (indicated by a flashing LED diagnosis according to the usual frequency) while the second holds steady on the LED diagnosis. On both pieces is active the management of alarms. If the piece that charge turns off (or break!) the second automatically begins charging. If there is no communication between the two CB has alarm with flash = code 11 blinks, under these conditions both the CB trying to charge the battery (situation not recommended) to which it is appropriate to human intervention, just reconnect the two pieces and the situation normalizes.

Auxiliary Load Connection Typical application for

Auxiliary device, one output for Load "DC Bus", one Input/Output for connection to the battery.
 N°1 battery (12 Vdc) for CB122410A;
 N°2 battery (12 Vdc) connected in Series for CB;

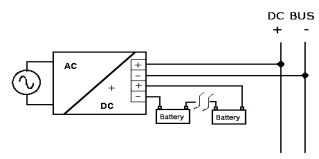

Operating and Display Element:

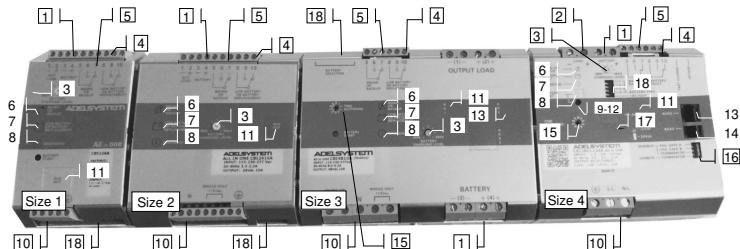

No. 1: Battery Connection Port:

Connect the battery between pin. 3 (-) and 4 (+)
 One battery (12 Vdc) for CB12yy;
 Two battery (12 Vdc) connected in Series for CB24yy

No. 2: Output Load: (Size 4)

If Present on the device
 Connect this Output to the load 1 (-), 2 (+).
 (Output Load It is to supply Auxiliary Load)

No. 3: Charging Level Current:

In order to protect the battery from excessive charging currents, the device allows you to limit the maximum charge current by adjusting the trimmer. It allows you to limit from max in up to 20% of current In. To determine the maximum battery charge current, see the battery manufacturer's Data Sheet, If it is not possible, consider that on average the maximum charge current is 10% of Ah's rated battery current; The data is suitable for both Lead Acid and NiCd batteries.



No. 4, 5 Signal Ports (Output Isolated):

Connections for:
 No. 5: MAINS OR BACKUP: Input Mains On/Off. Contact: 5,6,7
 No. 4: LOW BATTERY, BATTERY REPLACEMENT, FAULT BATTERY or FAULT SYSTEM Contact: 8,9,10

Relay Contact Rating:

Max.DC1: 30 Vdc 1 A; AC1: 60 Vac 1 A : Resistive load (EN 60947-4-1)
 Min.1mA at 5 Vdc: Min. permissive load

Signal Output port true table:	Port N°2 - Led N°6 Mains/Back-Up		Port N°1 - Led N°7 Fault Battery	
	5-6 Closed	5-7 Closed	8-9 Closed (OK)	8-10 Closed
Mains Input Vac	ON OFF	■ - led Off	■ - led Off	■ - led Off
The battery in BackUP it is less than 30% cap?	YES NO	■ - led On (1) ■ - led On	■ - led Off	■ - led On
Battery or system Fault?	YES NO	■ - led Off ■ - led Off	■ - led Off	■ - led On (2)

Note:
 (1) For better efficiency of the system, filter relay Mains/Back up with a delay of at least 5 seconds before give alarm Main Lost, example: connection to PLC.
 (2) See Diagnosis Led

No. 6, 7 and 8 Display Signals

No.6: Led Mains/Back Up: Input Mains On/Off
 No.7: Led Low Battery(capacity less than 30%), Fault connections systems, Battery replacement.
 No.8: Led Battery charge mode,
 No.8: Led DIAGNOSIS: Battery charge mode,
 Led Diagnosis. Diagnosis of the system through "blinking code" signal Light

State of Charge

Monitoring Control Chart:	State	Led DIAGNOSIS (No.8)	LED BATTERY FAULT (No.7)
Charging Type	Float	1 Blink/2 sec	OFF
	Absorption	1 Blink/sec	OFF
	Boost	2 Blink/sec	OFF
	Recovery	5 Blink/sec	OFF

Fault Battery / Fault System

Reverse polarity or high battery Voltage (over 32.5Vdc for CB 24xxA)	1 Blink/pause 1	ON
Battery No connected	2 Blink/pause 1	ON
Element in Short Circuit	3 Blink/pause 1	ON
Over Load or short circuit on the load	4 Blink/pause 1	ON
Bad battery; Internal impedance Bad or Bad battery wire connection	5 Blink/pause 1	ON
System Auto Diagnosis		
Life test not possible	6 Blink/pause 1	ON
Boost condition; battery discharge after 4 min. of overload. Internal fault	8 Blink/pause 1	ON
9 Blink/pause 1	9 Blink/pause 1	ON
Low battery (under 18.5Vdc for CB 24xxA) Only if started from battery, no Mains input, from Jumper N°5 or Push Bottom	10 Blink/pause 1	ON
MODBUS error	11 Blink/pause 1	ON
Life test not possible; Parallel mode on Slave Device	12 Blink/pause 1	ON
Bad battery wire connection; Parallel mode on Slave Device	13 Blink/pause 1	ON
Boost condition; battery discharge after 4 min. of overload; Parallel mode on Slave Device	15 Blink/pause 1	ON

No. 9, 12: Start From Battery Only; No Mains Vac (Size 4)

No. 9: Push-bottom, for 3 sec., in the front panel for switch ON the system without the "Mains input Vac" but only the battery connected.
 No.12: (Jumper n.5) It is also available the same function for remote start from the battery, via RTCONN cable connected in the Push-bottom mounted on front Panel of the external system. Standard function for all products.
 N.B.: This Function it is present only if it is enabled Jumper in Option position

No. 10: Input AC Port pin. L – N:

1 Phase Switching Power Supplies L, N, PE.
 Size 2 and Size 3 BRIDGE ONLY for input 115 Vac, and connect L, N, PE.

No. 11: Auxiliary Output "AUX 1"

Remove the window label to find the connector.
 It is possible to connect the Temperature sensor probe and apply it on the battery. The function of the probe is for temperature battery compensation. With this it is possible to activate the specifications of the EN54-4 fire norm.



Battery Temperature Compensation Charge (not for NiCd)

Connecting to Auxiliary Output AUX1 the cable RJTEMP (supplied separately), the CB will vary the voltage of battery charging depending on the temperature:

Fast Charge	Float charge
+/-5mV/°C x n. of Cells from -8°C to +45°C +140mV/Cell ÷ -200mV/Cell compared to the value at 20°C	+/-3mV/°C x n. of Cells from -20°C to +45°C +120mV/Cell ÷ -120mV/Cell compared to the value at 20°C

The device stop to charge the battery If the temperature is less than -20°C or greater than +45°C. The alarm fault battery could be signalled by 7 blink code.
 The sensor placed on cable RJTEMP must be applied on the battery.

No. 13: Auxiliary Output "AUX 2" (Size 3-4)

Present only in Sizes 3 and Sizes 4, connection MODBUS via RJ45 connector. See instruction MODBUS communications protocol. (CANBUS to be implemented).

No. 14: Auxiliary Output "AUX 3" (Size 4)

Present only in Sizes 4. The function is the same of Auxiliary Output "AUX 2"

No. 15: Buffering Time Setting (Size 3-4)


On models Size 3 and Size 4 is possible to set a buffering time. It can be selected by setting the desired value on the rotary switch 13. Buffering time is initiated when the mains is switched OFF. The LOAD output will be ON for the selected time.

Switch position	0	1	2	3	4	5	6	7	8	9
Buffering Time (min)	∞	0,5	2	5	10	15	20	30	45	60

If the switch is in position 0, the LOAD output will be in ON state until the battery is completed discharged. Any way to prevent damage risks, the unit disconnects the batteries when a minimum voltage level is reached. For units Size 1 or 2 you have to version with the extension CBxxxxATBx. The LOAD output will be in ON state until the battery it is completed discharged. It is however possible to request factory customized versions with specific buffering time setting.

No. 16: Bus Termination (Size 4)

Caution: Switch off the system before Setting the Jumper.
 Read the MODBUS/CANBUS instruction manual to learn about the operational functions available.
 Jumper Setting always active during all states of the system.

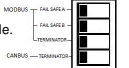

No. 17: Select Output Voltage (Size 4)

Caution: Switch off the system before Setting the Jumper

Output Voltage Selection	■ - 24 Vdc	12 Output Voltage
Output Voltage Selection	■ - 12 Vdc	24 Output Voltage

No. 18: Battery Management Configurations

Preliminary Operations: One device for all battery types. Completely automatic, all devices are suitable to charge most batteries types thank to User Selectable charging curves. They can charge open lead acid, sealed lead acid, Gel and Ni-Cd. It is possible to change or add other charging curves connecting the device to a portable PC.

Caution:Switch off the system before Setting the jumper.Only jumper in position 6 is Refreshed also with power ON.

Table with 7 columns: Battery Type Selection, Jumper Position (Size 1), Jumper Position (Size 2), Jumper Position (Size 3), Dip Switch Position (Size 4), Float charge (Volt/Cell), Fast charge (Volt/Cell). Rows include Open Lead, (AGM) Low, Gel Battery, NiCd, Li-Ion (4), and Custom Charging Curve (5).

Table with 4 columns: Functional Setting, Function. Rows include Battery Life test ON, Fast Charge Enable (3), Power Supply Enabling, *Start from Battery* (without Input Mains) (1), and Load Enabling (2).

Notice: 1. Do not leave the jumper in position 5; otherwise, in Backup mode, the battery discharges completely close to zero. 2. This function permit to restart the device if the Contact closed: Auxiliary LOAD enabled...

3. Jumper present in Fast Charge means also that every 288h, the device go in "Cycling Refresh Charging". This mode continue for 85 minutes at the same voltage condition: 2.4V/Cell; for Lead Acid Batteries. 4. Please note that it is possible to use lithium-charging curve just with a single BMS AND Only by custom request...

Battery Care The Battery Care philosophy is base on algorithms that implement rapid and automatic charging, battery charge optimization during time, flat batteries recovery and real time diagnostic during installation and operation. The Real Time Auto-diagnostic system, monitoring battery faults such as, elements in short circuit, accidental reverse polarity connection, disconnection of the battery, they can easily be detected and removed by help of Blink Code of Diagnosis Led...

Check for accidental disconnection of the battery cables: All In One detects accidental disconnection and immediately switched off the output power.

Battery not connected: If the battery is not connected no output power.

Test of quality wire connections: During Float charge the quality (resistance) on the battery connection is checked every 60 sec. This to detect if the cable connection has been properly made.

Battery in Open Circuit or Sulphated: Every 220 minute. All In One tests of internal impedance, in Float charging mode.

Reverse Polarity check: If the battery it is connected with inverted polarity, All In One is automatically protected.

Test of battery voltage connections: Appropriate voltage check, to prevent connection of wrong battery types, more or less than the nominal voltage.

End of Charge check When the battery it is completely full, the device automatically switch in Float charging mode.


Check for Battery Cells in short circuit Thanks to specific algorithms of evaluation, the CBs recognize batteries with cells in internal short circuit. In Float charge every 220 minute test of element in short circuit.

Diagnosis of battery and device All CB devices support the user during installation and operation. A Blink code of Diagnosis Led allows to discriminate among various possible faults. Error conditions, "LED Battery Fault" ON and "LED Diagnosis" blinking with sequence; see Display Signal section.

Protection Features On the primary side: the device is equipped whit an internally fuse. If the internal fuse is activated, it is most probable that there is a fault in the device. If happen, the device must be checked in the factory. On the secondary side Battery and load: The device is electrically protected against short circuits and overload. Inversion polarity: the module it is automatically protected against inversion of battery polarity and connection of load inverted.

Thermal behaviour Surrounding air temperature 50°C. For ambient temperature of over 50°C, the output current must be reduced by 2.5% per °C. Max 70°C At the temperature of 70°C the output current will be 50% of In. The equipment does not switch off in case of ambient temperature above 70°C or thermal overload. The devices are protected for Over temperature conditions "worst case"; in this situations the device Shut-down the output and automatic restart when temperature inside fall.


Charging Curve Automatic multi-stage operation and real time diagnostic allows fast recharge and recovery of deep discharged batteries, adding value and reliability to the system hosting the CB device. The type of charging is Voltages stabilized and Current stabilized IUoUo. Five charging phases are identified by a flashing code on a Diagnosis LED. To maintain the Output Load in lower Voltage state, don't put jumper in position 6, in this case no boost charge but only Float charge. Fast/Bulk Charge means also that every 288h, the device go in "Cycling Refresh Charging" for 85 minutes at 2.4V/Cell.

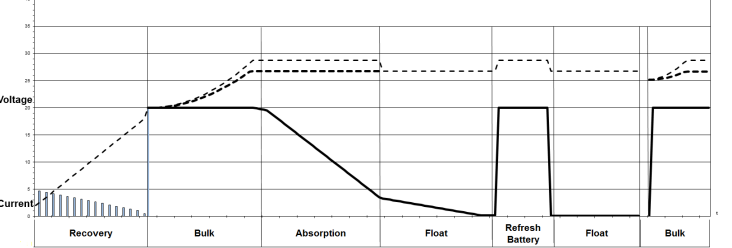

Standard and Certifications Electrical Safety For Mounting: Device assembling: UL508, IEC/EN 60950 (VDE 0805) and EN 50178 (VDE 0160). Installation according: IEC/EN 60950. Input / Output separation: SELV EN 60950-1 and PELV EN 60204-1. Double or reinforced insulation. Safety of Electrical Equipment Machines: EN 60204-1.

CE In According to EMC 2014/30/UE and Low voltage directive 2014/35/UE EMC Standards Immunity: EN 61000-4-2, EN 61000-4-3, EN 61000-6-2, EN 61000-4-4, EN 61000-4-5. EMC Standards Emission: EN 61000-6-4, EN 61000-6-3, EN 61000-3-2 (see data sheet for each device) Conformity to: EN60950 / UL60950-1 and CSA C22.2 No. 60950-1-07 (Information Technology Equipment) – Safety – Part1: General Requirement. IEC/EN 60335-2-29 Battery chargers Electrical safety EN54-4 Fire Detection and fire alarm systems; DIN41773 (Charging cycle) Approved: Devices:CB1210A, EN60950 / UL60950-1 and CSA C22.2 No. 60950-1-07 (Information Technology Equipment) – Safety – Part1: General Requirement.

Rail Mounting: All modules must have a minimum vertical and horizontal distance of 10 cm to this power supply in order to guarantee sufficient auto convection. Depending on the ambient temperature and load of the device, the temperature of the housing can become very high.

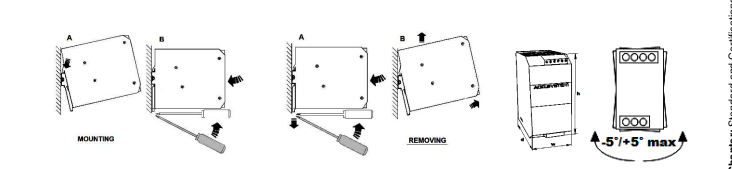

Large technical table for CB Charge & Testing. Columns list models: CB1235A, CB240AC, CB240A, CB122410A. Rows include Input Data, Output Data, INPUT DATA, OUTPUT DATA, BATTERY CHARGER OUTPUT, RECOVERY CHARGE, SWITCHING ON AFTER APPLYING MAINS VOLTAGE, SIGNAL OUTPUT (RELAY), AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR, CLIMATIC DATA, GENERAL DATA, and CONNECTION DIAGRAM.